

we make it easy!

401 944 4444

800 407 7024


autorust.com



ART-35 Installation Instructions

Drive Shaft Safety Loop

- 1) **Safety Notes** – *Follow all instructions. Failure to follow instructions may result in property damage or serious or fatal injury. User assumes all liability.*
 - a) Support your vehicle properly over a solid, level floor. Use good safety stands – don't cut corners here! – or on an automotive repair shop lift.
 - b) Always wear eye protection and gloves when drilling.
- 2) **Preparing Vehicle for Kit Installation**
 - a) Support vehicle with safety stands or lift.
 - b) Remove seats.
 - c) Remove sill molding.
 - d) Pull back carpets.
- 3) **Installing Kit**
 - a) From the underside, slide top loop over forward end of drive shaft, slightly behind the back of the front universal joint. Mark location on the floor where you will drill four 3/8" holes (there is a flat area on the floor.)
 - b) Install hardware per drawing with nuts and lock washers on bottom.
 - c) After installing, make sure drive shaft has clearance.

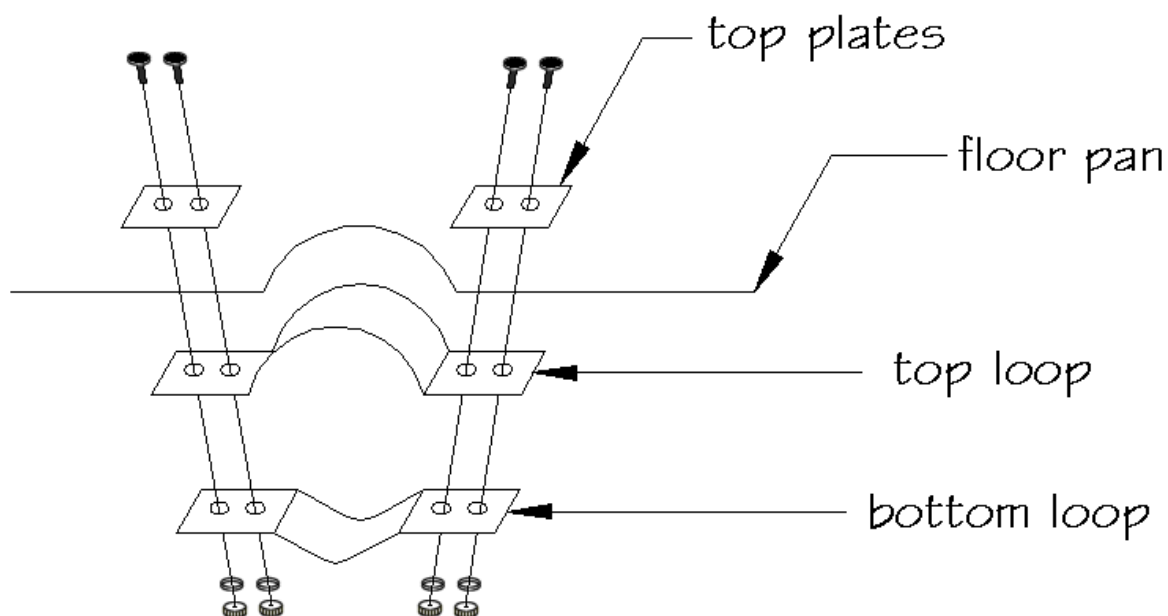

Technical support is available Mon-Fri 8-430 EST at (800) 407.7024