


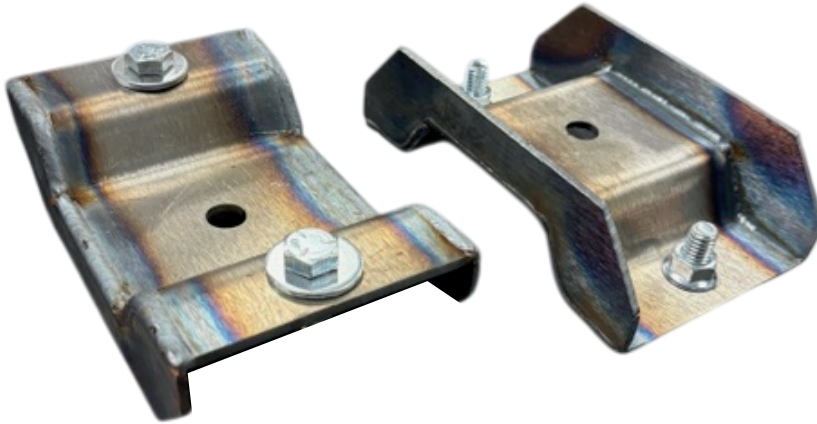

ART-286
1999-2006
4WD Silverado/Sierra
1500 All Cab Styles
Rear Bump Stop
Mounting Bracket

IMPORTANT: Read and understand the General Instructions
Before Installing SafeTCap® Frame Repair Kits

- 1)** Jack up rear of truck for easier install.
- 2)** Remove old mounting bracket and rubber stop if reusing.
- 3)** Clean any debris on frame.
- 4)** Attach the bump stop to the new mounting bracket.
- 5)** Bolt up bracket to the frame with hardware Included.
- 6)** Finish with Paint, Primer, or undercoating to protect it.